

The present document was valid at the time of print. A later version may be available online

WM 9X00IN Bulb table and installation instructions

Information

Bulb table

Basic variant

Use	Shape, wattage
High beam headlight	H9, 65 W
Dipped beam headlight	H7, 55 W
Auxiliary headlight	LED
Marker light	LED
Tail light	LED
Brake/tail light.	LED
Tail light, reflector	LED
Reversing light	LED
Number plate light	LED
Direction indicator light, front	WY, 21 W
Direction indicator light, rear	LED
Direction indicator light, side	WY, 5 W/W, 3 W for USA
Side marker light for USA	W, 3 W
Luggage rack light	LED
Luggage compartment light, rear	X, 6 W
Luggage compartment light, front	X, 6 W
Interior light, reading light	LED
Orientation light	LED
Footwell lights	Blue-Vision W, 5 W
Ignition lock light	LED

Glove compartment light

Blue-Vision W, 5 W

Optional equipment

Use	Shape, wattage
Bi-Xenon headlight	DLS, 25 W
Bi-Xenon headlight with cornering light	D3S, 35 W
Auxiliary main beam for Bi-Xenon headlight	H7, 55 W
Auxiliary main beam for Bi-Xenon headlight with cornering light	H7, 55 W
Auxiliary headlight	LED
Marker light	LED
Tail light	LED
Brake/tail light.	LED
Tail light, reflector	LED
Reversing light	LED
Number plate light	LED
Direction indicator light, front	WY, 21 W
Direction indicator light, rear	LED
Direction indicator light, side	WY, 5 W
Side marker light for USA	W, 3 W for USA
Luggage compartment light, rear	LED
Luggage compartment light, front	LED
Luggage rack light	LED
Interior light, reading light	LED
Ambient light	LED
Orientation light	LED
Ambient lighting/oddments tray light	LED
Intervention back light	LED
Footwell lights	LED

Ignition lock light	LED
Make-up light	LED
Glove compartment light	Blue-Vision W, 5 W

Installation instructions

Installation instructions



Live components

- **Risk of electric shock**

- Remove electric charge from component.
- Make sure it does not switch on again.
- Check that there is no electric charge
- Cover adjacent live parts.

NOTICE

Incorrect handling of bulbs

- **Risk of damage to bulbs and the bulb housing**

- Switch off ignition and remove ignition key.
- Switch off the relevant loads when changing bulbs.
- Only use bulbs listed in the bulb table.
- Only install clean bulbs that are free of grease.
- Always use a cloth or soft paper when working with bulbs.
- Observe the safety instructions when changing a bulb in a Bi-Xenon headlight.
- In certain states, it is compulsory to carry spare light bulbs.

981120, 981121, 981130, 981131, 981320, 981321, 981330, 981331, 981110, 981111, 981310, 981311

Model year as of 2013

C00, C02, C05, C06, C07, C08, C09, C10, C11, C12, C13, C14, C15, C16, C17, C18, C19, C20, C21, C22, C23, C24, C25, C26, C27, C28, C32, C33, C34, C35, C36, C37, C38, C39, C41, C45, C46, C96, C97, C98, C99