

Diagnostic information - air conditioner

Interior sensor fan

INFORMATION

The interior temperature sensor is part of the air conditioner regulator.

Diagnostic conditions:

- Ignition on
- 35 seconds diagnostic time
- No power supply fault stored

Possible fault causes:

- ◆ Interior sensor fan faulty
- ◆ Air conditioning regulator faulty

Diagnostic information - air conditioner

Interior-temperature sensor

INFORMATION

The interior temperature sensor is part of the air conditioner regulator.

The fault is detected when a temperature of:

◆ greater than 77 °C/171 °F (upper limit exceeded)

or

◆ less than -50 °C/-58 °F (below lower limit)

is measured for longer than 0.4 seconds.

When the fault is detected, a substitute value of 22 °C (72 °F) is used.

Diagnostic conditions:

- Ignition on
- No power supply fault stored

Possible fault causes:

- ◆ Air conditioning regulator faulty