


The present document was valid at the time of print. A later version may be available online

## WM 481319 Removing and installing trim panel (steering-column switch)


### Removing and installing trims

1. Adjust steering wheel to lower position.
2. For the top trim panel, unscrew the two Torx screws (T10) **-A-** .

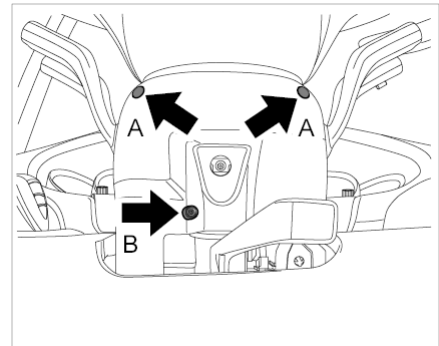

*Fastening points trims*

3. Pull upper trim panel upwards, disconnect plug, remove wiring harness from the guide and unclip leather trim panel **-arrows-** .

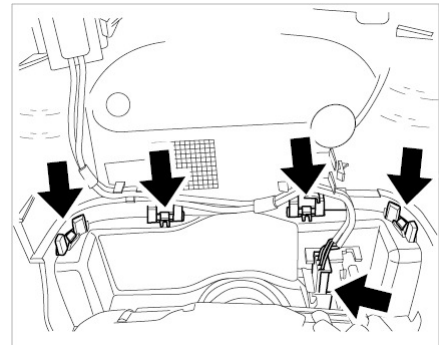

*Unclip top trim panel*

4. For removing the lower trim panel, unclip right wiring harness and unscrew the Torx screw (T10) **-B-** .

Install in reverse order. Check wiring harness for correct routing.

987110, 987111, 987120, 987121, 987140, 987141, 987310, 987311, 987320, 987321, 987330, 987340, 987360, 987361, 987371, 987381, 987720, 987721, 987160, 987161, 987740, 987741

Model year as of 2005

C00, C02, C05, C07, C08, C09, C10, C11, C12, C13, C14, C15, C16, C18, C19, C20, C21, C22, C23, C24, C25, C26, C27, C28, C32, C33, C34, C35, C36, C37, C38, C39, C45, C46, C98, C99